

HP, Canon, Epson & Brother printers | Easy | 2 min read

Brother iPrint&Scan: how to print and scan from your phone or computer

Please note: independent guidance. Vision Tech is not affiliated with the maker. Menus differ between models and software versions, so check the manual or on-screen help.

Brother iPrint&Scan is Brother's free app for printing and scanning from a smartphone, tablet or computer to a Brother printer. Features vary by model, so check the app's list or your manual.

Before you start

- Your Brother printer needs to be switched on and connected to the same Wi-Fi network as your phone.
- If you have not connected it yet, follow the quick setup guide in the box or see our Brother Wi-Fi guide.
- Download **Brother iPrint&Scan** from the App Store or Google Play.

Choose your printer

1. Open the app.
2. It should search for printers on your network. Select your printer from the list.
3. If it is not listed, check the printer and phone are on the same Wi-Fi network, and try again.
4. If asked for permission to access photos or local network devices, allow it, since the app needs these to work.

Print

1. Choose **Print**, then select **Photos**, **Documents** or another source.
2. Pick what you want to print.
3. Check the paper size and number of copies.
4. Tap **Print**.

Scan

1. Put the page on the scanner glass or in the automatic feeder, if your model has one.
2. Choose **Scan** in the app.
3. Pick a scan type or size and tap **Scan**.
4. Save the file to your phone, send it by email or share it on.

If it does not work

- Restart the printer and your phone.
- Make sure your phone is not on mobile data only or a guest Wi-Fi network.
- Update the app from your app store.
- Check you are using a supported model.

Brother also provides software for Windows and Mac. You can find it on Brother's UK support website by searching your exact model name.

When to get more help

Get help if the printer is never found, if scan buttons do nothing, or if you are not sure which software to download. Do not open the printer casing.

Still stuck? Email admin@visiontech336.com and tell us what you can see on the screen. Menus and button names can differ slightly between versions and makes. If something does not match, stop and ask rather than guess. Please never send passwords or card details.